



## Instructions for replacing Ford 2G style alternator with the later style Higher Amp 3G unit.

The original 2G Ford alternator is equipped with 2 plug-in pigtails. The first is the regulator pigtail which will remain unchanged. The second pigtail will be replaced with 2 ring terminals and a separate pigtail for the stator terminal.

1. Cut the main charging wire pigtail connector from the attached wires. This is the largest of the 2 connectors and has 2- #10 Black/Orange stripe wires and 1- #16 wire white with a black stripe.

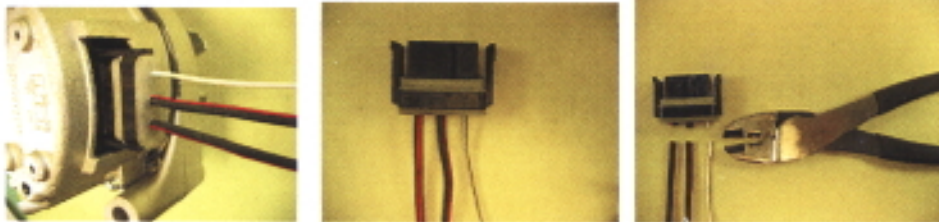

2. Install the 2 supplied #10 Ring terminals on the large Black/Orange wires. Install supplied single pigtail on the small White/Black wire.

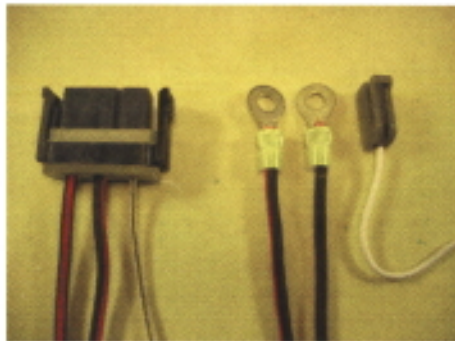

3. Once these terminals and Pigtails are installed, you are ready to attach to the new 3G Higher Amp alternator.

